

OTHER GOOD DIRECTIONS PRODUCTS YOU MIGHT ENJOY



Boot Trays



Rain Chains



Cupolas & Finials



Fire Pits



Copper Yard & Garden Torch Product Manual



Contains assembly & care information for item #'s:
202CH-C • 202CHV1-C • 203CH-C • 203CHV1-C



Table of Contents

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

Table of Contents.....	2
Care and Maintenance	3
Package Contents for Items # 202CH-C, 202CHV1-C, 203CH-C, 203CHV1-C	4
Assembly Instructions for Items # 202CH-C, 202CHV1-C, 203CH-C, 203CHV1-C.....	5
Important Safety Information.....	7



LIMITED WARRANTY, DISCLAIMER AND LIMITATION OF REMEDIES

Good Directions, Inc. warrants its torches to be free from defects in material and workmanship for one (1) year from the date of original purchase, provided that the applicable product was (i) used in accordance with Good Directions, Inc. recommended usages, and (ii) purchased directly from Good Directions, Inc. or from an Authorized Good Directions, Inc. Dealer.

This limited one (1) year warranty covers defects in material and workmanship and Good Directions will, at its option, repair or replace a defective product or product component or refund the purchase price paid for the defective product. This limited one (1) year warranty does not apply to any changes in finish color of copper or golden leaf components (which is expected to occur over time), product damage resulting from reasonable wear and tear, improper installation, service or product alteration performed by unauthorized service agents, neglect, accident, theft/vandalism, misuse, or exposure to extremes of heat, humidity, corrosive environments or other Acts of Nature.

Good Directions, Inc. will endeavor to supply original replacement parts; however, replacement parts may differ from original parts.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL GOOD DIRECTIONS, INC. BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM USE OF THIS PRODUCT, UNLESS SPECIFICALLY REQUIRED BY APPLICABLE STATE LAW.

Good Directions, Inc. makes no other warranties of any kind, either expressed or implied. No dealer, employee, agent, nor any third party, may create or assume any other liability, obligation, or responsibility on behalf of Good Directions, Inc. This Limited Warranty provides purchasers with specific legal rights and other legal rights may also apply, which vary from state to state. This Warranty is not a warranty of future performance or a statement of the useful life of any Good Directions, Inc. product, but only a warranty to repair, replace, or refund.



Important Safety Information

WARNING - FOR YOUR SAFETY

- For OUTDOOR use only. Do not use in a building, garage or any other enclosed area.
- Never leave an open flame unattended.
- This torch should not be used in or on boats or recreational vehicles.
- Do not use this torch directly under overhanging trees or near combustibles.
- Do not use the torch indoors. Carbon monoxide fume hazard.
- Do not burn flammable liquid such as gasoline, kerosene or starter fluid in the torch.
- Do not use this torch on combustible surfaces such as grass, leaves, mulch, etc.
- Do not touch the torch while in use. It is HOT.
- The torch will remain very hot after use. Do not touch or move until cool.
- Do not allow children or pets near the torch without supervision.
- Keep a fire extinguisher nearby.
- Do not overfill your torch.



CALIFORNIA PROPOSITION 65 WARNING: This product and combustion products emitted when this product is burning can expose you to chemicals, including carbon monoxide, which are known to the State of California to cause cancer, birth defects and other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Consumers should check state and local codes and regulations regarding the use of this product

Care and Maintenance

Thank you for purchasing a Good Directions Copper Torch. With proper care and maintenance your torch will provide you with years of enjoyment. Your torch is made of pure copper and will react to the weather and heat and will patina over time.


- Equally space your torches throughout your backyard or patio. For proper lighting and ambience, place torches 6 feet to 8 feet apart.
- Press torch securely into the ground or use a torch stand.
- To extinguish, please use the snuffer cap provided. Carefully place the snuffer cap completely over the wick and leave in place until the flame is entirely extinguished. Leave the snuffer cap in place to protect the wick from the elements.
- When filling, steady the torch in the cradle or on a level surface to prevent spillage. Remove the wick and pour in oil. If necessary, wipe off any spilled oil.
- When filled, store torches in a secure, up-right position so torches do not tip. Oil can remain in the torches when not in use. Keep torches out of reach of children and pets.



Package Contents


Items 202CH-C, 202CHV1-C, 203CH-C, 203CHV1-C

Part	Description	Quantity
A	Snuffer Cap with Chain	1
B	Forever Burn © Fiberglass Wick with Brass Collar	1
C	Lamp	1
D	Cradle	1
E	2 Piece Pole	1

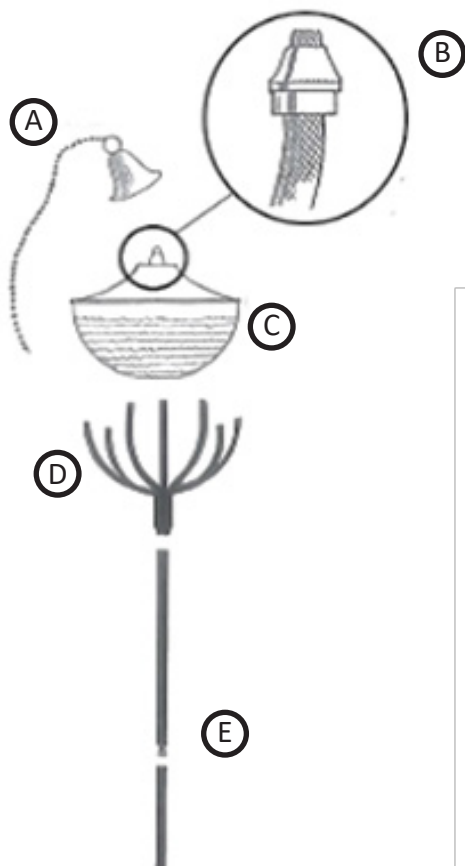

Package Contents

Items 202CH-C, 202CHV1-C, 203CH-C, 203CHV1-C

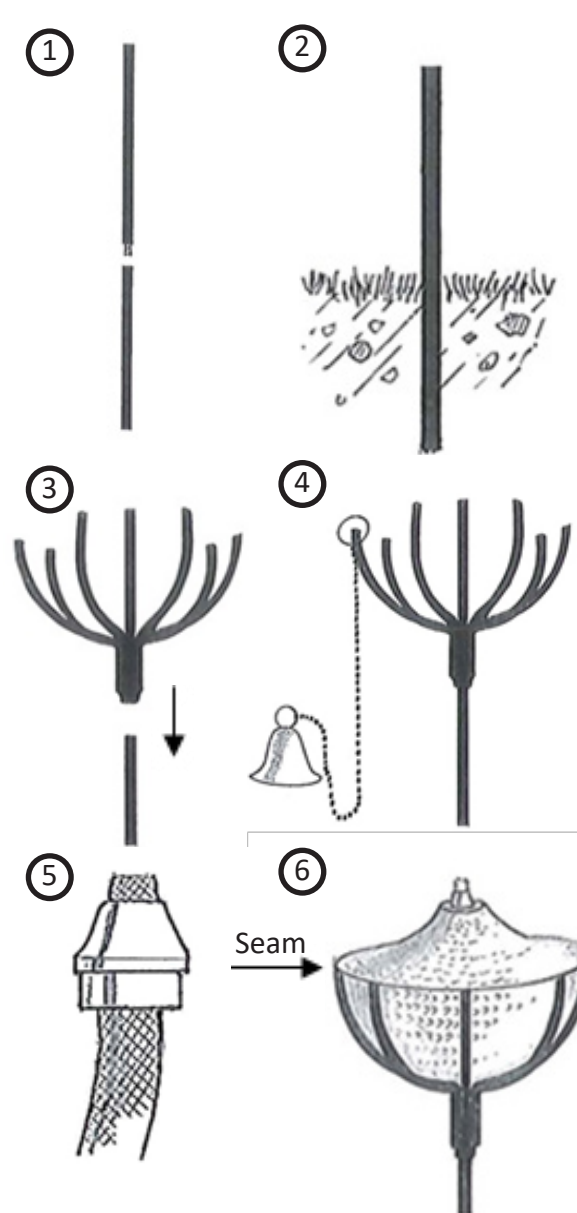

1. Thread Pole (E) together and tighten.
2. Press assembled Pole into ground as shown
3. Slide Cradle (D) onto Pole (E).
4. Hook Snuffer Chain (A) onto Cradle (D). Snuffer will hang while torch is in use.
5. Positions Fiberglass Wick (B) to shortest length above brass collar as shown to decrease smoke when lit.
6. Position Lamp (C) into Cradle (D) and fill with oil. Keep fluid below seam to prevent leaking. Insert Wick (B).