

Victorian Arrow Weathervane Assembly Instructions



Watch our Assembly Video at
www.gooddirections.com/installationinstructions or scan





Victorian Arrow

Assembly Instructions

Your Package Includes:

- 1 - Figure
- 1 - Set of Directionals
- 1 - Small Steel Threaded Rod
- 1 - Large Steel Rod (18")*
- 1 - Copper Globe




Assembled View

1. Thread small rod into large rod, tighten firmly by positioning wrenches on flat spots shown below.


Suggestion:
Apply a line of
Loctite® across
the threads.



2. Interlock directionals.
Remember: West goes left of north.

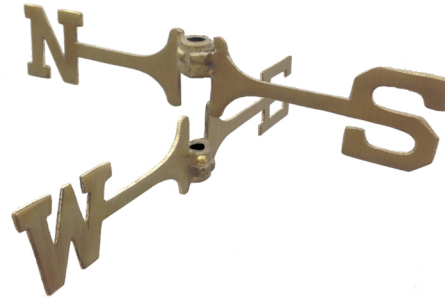

3. Slide the copper globe down so the top of the globe aligns with the top of the large rod. Slide up the brass ring and tighten to the bottom of the globe.

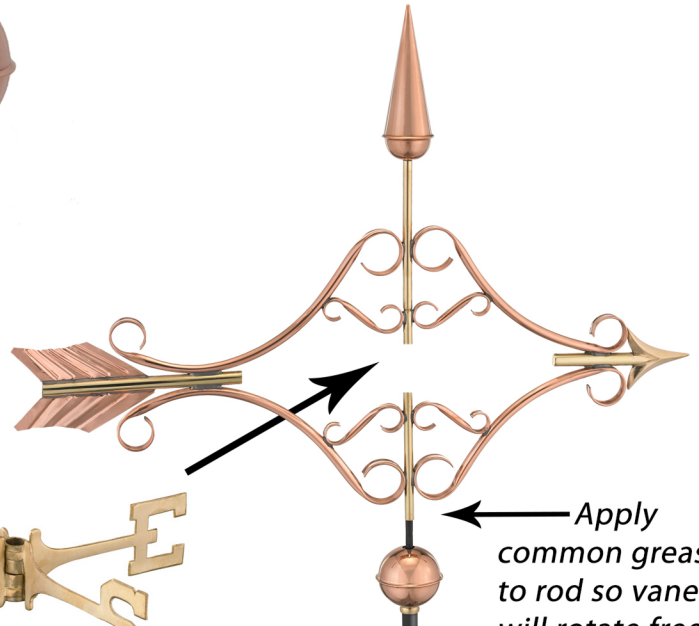

Apply
common grease
to rod so vane
will rotate freely.

*Please note: Cottage Sized Victorian Arrow has only ONE 15" rod instead of two rods.

4. Slide the bottom weathervane brass rod onto the small rod. As the black rod appears, place the directionals into the center of the weathervane and align the holes. Lower the directionals and the weathervane down the small rod. Tighten the set screws on the directionals.



PROPOSITION 65 WARNING: This product contains lead and other chemicals known to the State of California to cause cancer and birth defects and other reproductive harm.