

Soaring Hawk Weathervane Assembly Instructions

Your Soaring Hawk Weathervane comes with the arrow attached.




pointing towards the hawk's beak.

1. Rotate the arrow point so the tip is



2. Tighten set screws with the Allen Wrench (included). Screws should be tightened until flush with the brass rod.

Note: Do not over tighten screws!

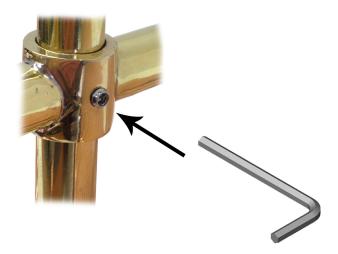

3. Complete weathervane assembly using instructions on the reverse side.



Watch our Assembly Video at www.gooddirections.com/installationinstructions or scan









